HCP



Hip Corner Plate

For complementary ridge connection, see pp. 166–167.

The HCP connects a rafter or joist to double top plates at a 45° angle.

Material: 18 gauge Finish: Galvanized


Installation:

- Use all specified fasteners; see General Notes.
- Attach HCP to double top plates.
- Birdsmouth not required for table uplift loads but may be required for download.
- · Install rafter and complete nailing. Rafter may be sloped to 45°.

Codes: See p. 13 for Code Reference Key Chart

Web Applications: Visit app.strongtie.com/rws to access our Roof-to-Wall Selector web application.



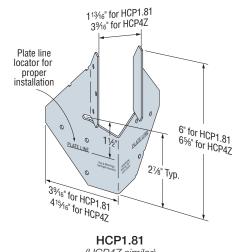


(HCP4Z similar)

These products are available with additional corrosion protection. For more information, see p. 16.

Member Size (in.)	Model No.	Fasteners		DF/SP Allowable Loads		SPF/HF Allowable Loads		
		To Rafters	To Plates	(160)		(160)		Code Ref.
				Uplift	F ₁	Uplift	F ₁	
13/4	HCP1.81	(6) 0.148 x 1½	(6) 0.148 x 1½	590	255	510	220	· IBC®, FL, LA
31/2	HCP4Z	(8) 0.148 x 3	(8) 0.148 x 3	990	230	850	200	

- 1. Loads have been increased for wind or earthquake loading, with no further increase allowed. Reduce where other loads govern.
- 2. The HCP can be installed on the inside and the outside of the wall with a flat bottom chord truss and achieve twice the load capacity.
- 3. Fasteners: Nail dimensions are listed diameter by length. See pp. 23-24 for fastener information.

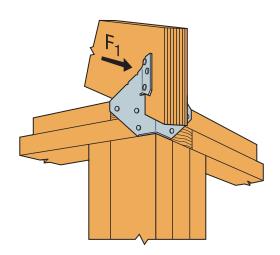

Typical HCP Installation