HH

Header Hanger

For fast, accurate installation of door and window headers and other cross members. HH header hangers can speed up the job, strengthen the frame, and eliminate the need for trimmers.

Material: 16 gauge


Finish: Galvanized

Installation:

Solid Sawn Joist Hangers


- Use all specified fasteners; see General Notes
- Attachment to 2x studs will result in two round holes not being filled in the studs and load reductions as noted in table

HH4 (HH6 similar)

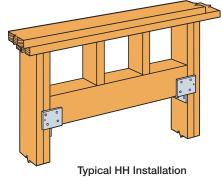

Codes: See p. 13 for Code Reference Key Chart

Model No.	Dimensions (in.)		Min. Post Size	Fasteners (in.)		DF/SP Allowable Loads						
				Stud	Header	F ₁			F ₂	F ₃	F4	Code Ref.
	W	Н	1 000 0120	Stuu	neauer	(100)	(115)	(125)	(160)			
HH4	3½	2 ¹³ ⁄16	2x	(7) 0.148 x 1 ½	(4) 0.148 x 1 ½	850	965	1,035	—	540	625	IBC®,
			Double 2x	(7) 0.162 x 21⁄2	(4) 0.162 x 21⁄2	1,005	1,140	1,230	_	720	965	
			Зx	(9) 0.162 x 31⁄2	(4) 0.162 x 31⁄2	1,295	1,470	1,585	675	720	965	
HH6	5½	51/8	2x	(10) 0.148 x 1 ½	(6) 0.148 x 1 ½	1,215	1,375	1,480	_	1,085	970	LA
			Double 2x	(10) 0.162 x 21⁄2	(6) 0.162 x 21⁄2	1,440	1,630	1,760	—	1,045	1,605	
			Зx	(12) 0.162 x 31⁄2	(6) 0.162 x 31⁄2	1,725	1,955	2,110	980	1,045	1,605	

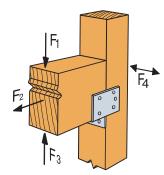

1. Loads have been increased for wind or earthquake loading, with no further increase allowed. Reduce where other loads govern.

2. For 3x posts, 0.162" x 21/2" nails may be substituted with no reduction in load.

3. For SPF/HF lumber, use 0.86 x DF/SP allowable loads.

4. Fasteners: Nail dimensions are listed diameter by length. See pp. 23-24 for fastener information.

RR

Ridge Rafter Connector

An interlock provides alignment control and correct nailing locations. For a rafter-to-face connector, flatten the top flange into the face plane. The RR may be used with rafters sloped up to 30°.

Material: 18 gauge

Finish: Galvanized

Installation:

• Use all specified fasteners; see General Notes


Codes: See p. 13 for Code Reference Key Chart

SD Many of these products are approved for installation with Strong-Drive[®] SD Connector screws. See pp. 362–366 for more information.

Model No.	Min. Rafter	Faste (ir		Uplift	DF/ Allowabl	Code	
	Size	Header	Rafter	(160)	Floor (100)	Roof (125)	Ref.
RR	2x6	(4) 0.148 x 1½	(4) 0.148 x 1½	130	330	330	IBC, FL, LA

1. Roof loads are 125% of floor loads unless limited by other criteria. Floor loads may be adjusted for load durations according to the code provided they do not exceed those in the roof column.

2. Fasteners: Nail dimensions are listed diameter by length. See pp. 23–24 for fastener information.

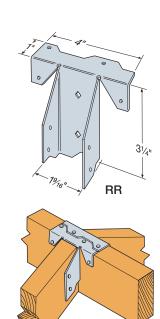

Typical RR

Installation

HH Load Directions

Strong-Tie