

URFP™/FRFP™

Retrofit Foundation Plates

Ideal where there is minimum vertical clearance, the URFP universal retrofit foundation plate provides a retrofit method to secure the mudsill to the foundation. This design allows installation flexibility when the mudsill is offset or inset from the foundation edge. With its combination of longitudinal embossments, stiffening darts and scalloped slotted holes, the URFP allows for a one-for-one replacement of 1/2" or 5/8" mudsill anchors as well as fixity to both the SDS screws and required concrete anchorage.

The FRFP flat retrofit foundation plate connects the mudsill to the foundation and provides lateral load resistance. This design allows the designer to maintain prescriptive requirements when filling three holes, or as an alternate, fill the two optional triangle holes and designers can utilize increased loads and greater allowable spacing.


Material: URFP — 14 gauge; FRFP — 7 gauge

Finish: Galvanized. May be ordered HDG.

Installation:

- Use all specified fasteners; see General Notes.
- Install URFP using 1/4" x 3" Strong-Drive® SDS Heavy-Duty Connector screws, which are supplied with the URFP.
- For URFP, alternate lag screws will not achieve published loads.
- FRFP shall use a minimum Strong-Drive SDS Heavy-Duty Connector screw length of 2 1/2" plus the shim thickness. Follow code requirements for predrilling. Fasteners are sold separately.
- For additional retrofit information, see strongtie.com.

Codes: See p. 13 for Code Reference Key Chart

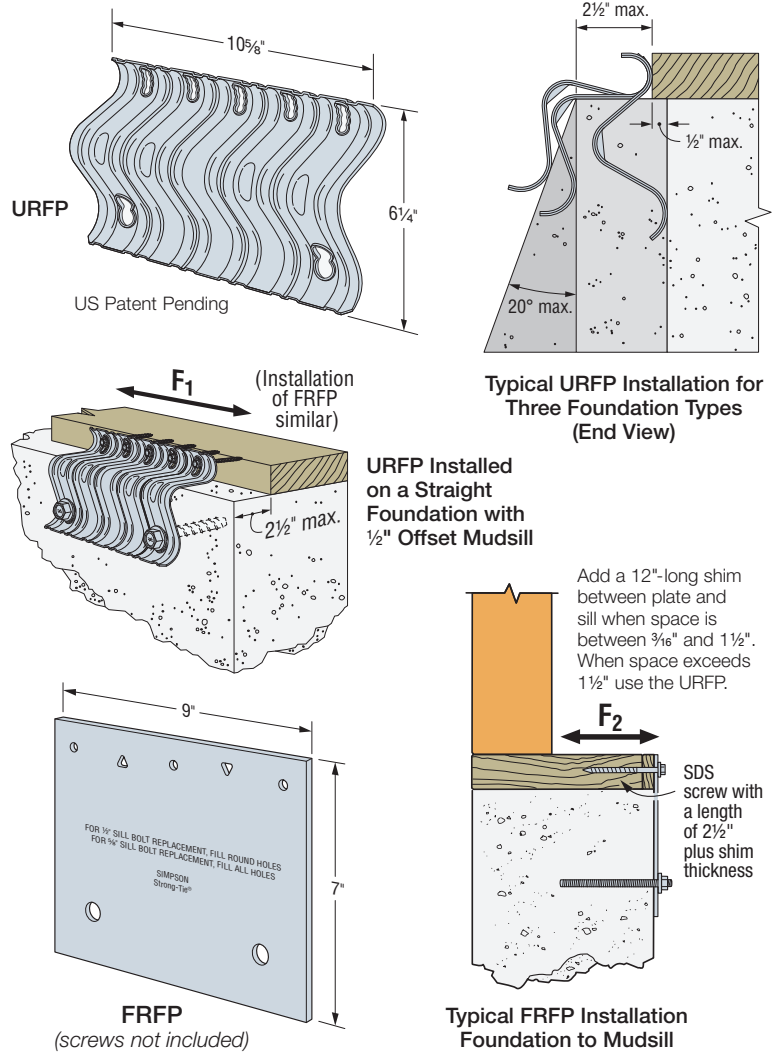

These products are available with additional corrosion protection. For more information, see p. 16.

| Model No. | Fasteners | | | DF/SP Allowable Loads (160) | | Code Ref. |
|-----------|-----------|------|--|-----------------------------|----------------|--------------|
| | Qty. | Dia. | Sill Plate | F ₁ | F ₂ | |
| | | | | | | |
| URFP | 2 | 1/2" | (5) 1/4" x 3" SDS | 1,530 | — | IBC®, FL, LA |
| FRFP | 2 | 1/2" | (3) 1/4" x 2 1/2" SDS + shim thickness | 1,065 | 320 | |
| | 2 | 1/2" | (5) 1/4" x 2 1/2" SDS + shim thickness | 1,810 | 320 | |

1. Allowable loads have been increased for wind or earthquake loading with no further increase allowed. Reduce where other loads govern.
2. Each anchor bolt requires a standard-cut washer. The Simpson Strong-Tie Titen HD® heavy-duty screw anchor does not require a washer.
3. Nominal embedment depth for post-installed anchors into concrete must be 4" for SET-3G™, ET-3G™ or AT-3G™, or use 1/2" x 4" Titen HD screw anchors. Anchorage into CMU is per designer.
4. For redwood mudsills, reduce F₁ on FRFP to 820 lb. (1,395 lb. for five screws) and on URFP to 1,180 lb.
5. For installation on SPF/HF sill plates, use 0.86 x DF/SP allowable load.

Prescriptive Spacing for URFP and FRFP to Replace Sill Anchor Bolts

| Number of Building Stories | Anchor Bolt Size | Anchor Bolt Spacing | Retrofit Foundation Anchor Model | | |
|----------------------------|------------------|---------------------|----------------------------------|---------------------------|--------------------------|
| | | | URFP | FRFP with Three Fasteners | FRFP with Five Fasteners |
| One story | 1/2" dia. | 6' o.c. | 6' | 6' | 6' |
| | 5/8" dia. | 6' o.c. | 6' | 4'-3" | 6' |
| Two stories | 1/2" dia. | 4' o.c. | 4' | 4' | 4' |
| | 5/8" dia. | 6' o.c. | 6' | 4'-3" | 6' |
| Three stories | 5/8" dia. | 4' o.c. | 4' | 2'-10" | 4' |

1. "Prescriptive" denotes spacing requirements per the IBC and designs per the IRC and conventional provisions of the IBC.
2. For design in accordance with the IBC Chapter A3, the URFP may be used as a one-for-one replacement for the alternative connections shown in Figures A304.3.1(2), A304.3.1(3) and A304.3.1(4).
3. Spacing is based on the parallel-to-plate load direction.
4. 5/8" anchor bolt required for Seismic Design Category E.